Lucky halloween

USER'S MANUAL

Hardware & Setup meun

BONUS GAME 1

BONUS GAME 2

Gamble

PayTable

Press ATTENDANT KEY (22A)TO SETUP

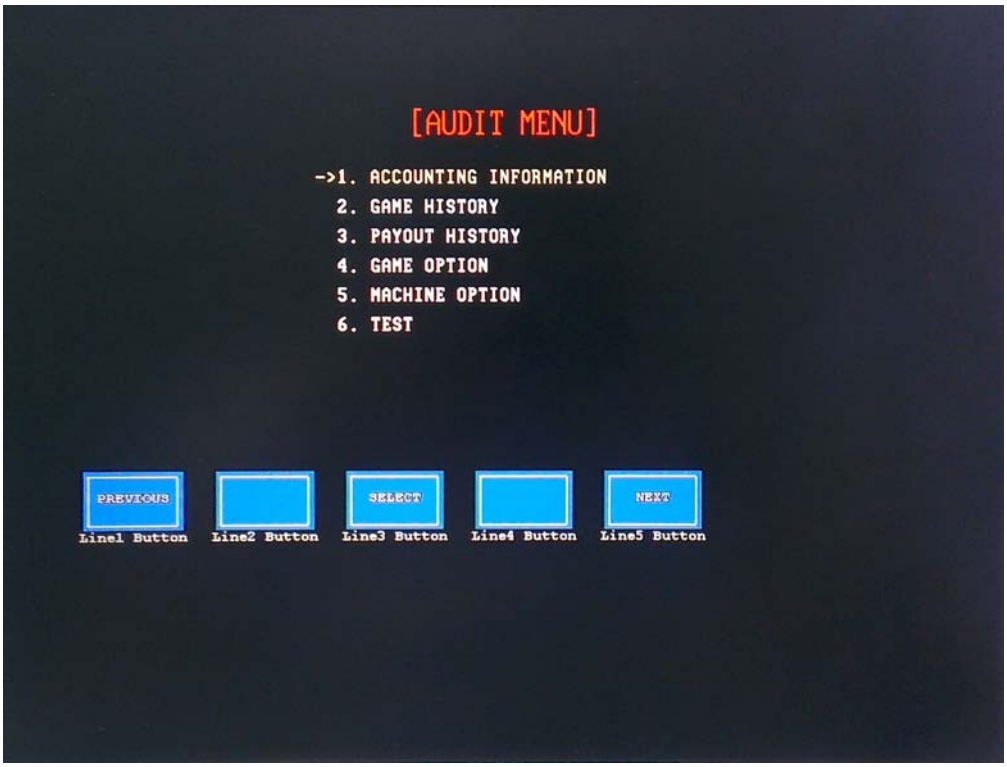

BUTTON EXPLANATION

LINE1 PREVIOUS

LINE3 SELECT

LINE5 NEXT

ITEMS (Main manual)

1. ACCCOUNTINGINFORMATION ·····5~6

2. GAME HISTORY ·····7

3. PAYOUT HISTORY ·····8

4. GAME OPTION·····9

5. MACHINE OPTION·····10~13

6. TEST ·····14~15

7. Hardware installation·····16

8. CONNECTOR DIAGRAM·····17

1.ACCCOUNTINGINFORMATION

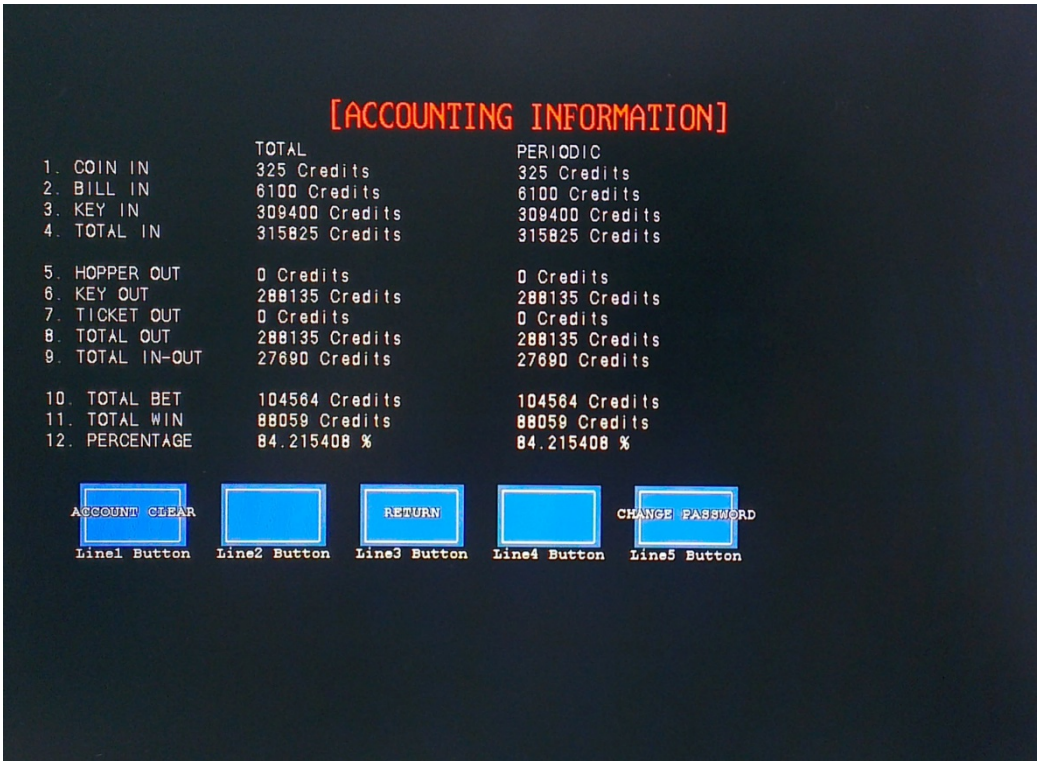
[ACCOUNTING INFORMATION]
TOTAL
PERIODIC
1. COIN IN 325 Credits 325 Credits
2. BILL IN 6100 Credits 6100 Credits
3. KEY IN 309400 Credits 309400 Credits
4. TOTAL IN 315825 Credits 315825 Credits
5. HOPPER OUT 0 Credits 0 Credits
6. KEY OUT 288135 Credits 288135 Credits
7. TICKET OUT 0 Credits 0 Credits
8. TOTAL OUT 288135 Credits 288135 Credits
9. TOTAL IN-OUT 27690 Credits 27690 Credits
10. TOTAL BET 104564 Credits 104564 Credits
11. TOTAL WIN 88059 Credits 88059 Credits
12. PERCENTAGE 84.215408 % 84.215408 %
ACCOUNT CLEAR
RETURN
CHANGE PASSWORD
Line1 Button
Line2 Button
Line3 Button
Line4 Button
Line5 Button

1.COIN IN	COIN IN CREDITS
2.BILL IN	BILL IN CREDITS
3.KEY IN	CREDIT IN KEY CREDITS
4.TOTAL IN	TOTAL IN CREDITS
5.HOPER OUT	HOPER OUT CREDITS
6.KEY OUT	PAYOUT KEY OUT CREDIT
7.TOTAL OUT	TOTAL OUT CREDITS
8.TOTAL IN-OUT	TOTAL IN-OUT CREDITS
9.TOTAL BET	TOTAL BET CREDITS
10.TOTAL WIN	TOTAL WIN CREDITS
11.PERCENTAGE	WIN / BET PERCENTAGE

ITEMS

1. Press LINE1 to clear PERIODIC account information but does not erase TOTAL information(Password required)
2. Press LINE3 to AUDIT MENU

3. Press LINE5 to change password

3.1 INPUT OLD PASSWORD(PRESS LINE1~LINE5 TO INPUT DEFAULT VALUE(111111))

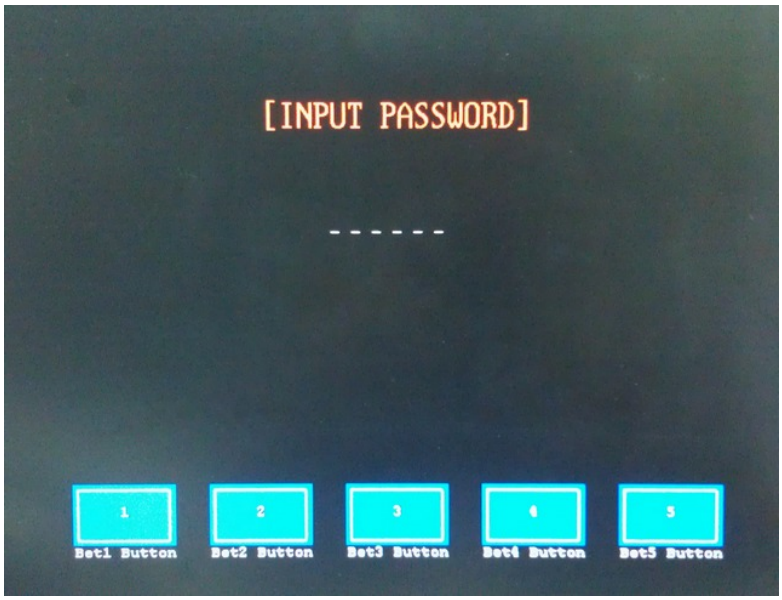

3.2 INPUT NEW PASSWORD

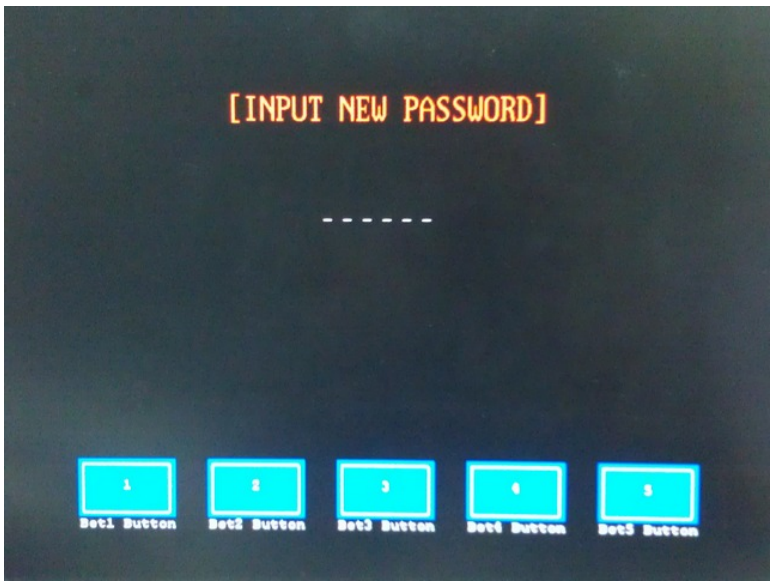

3.3 Enter the password again to confirm

2.GAME HISTORY

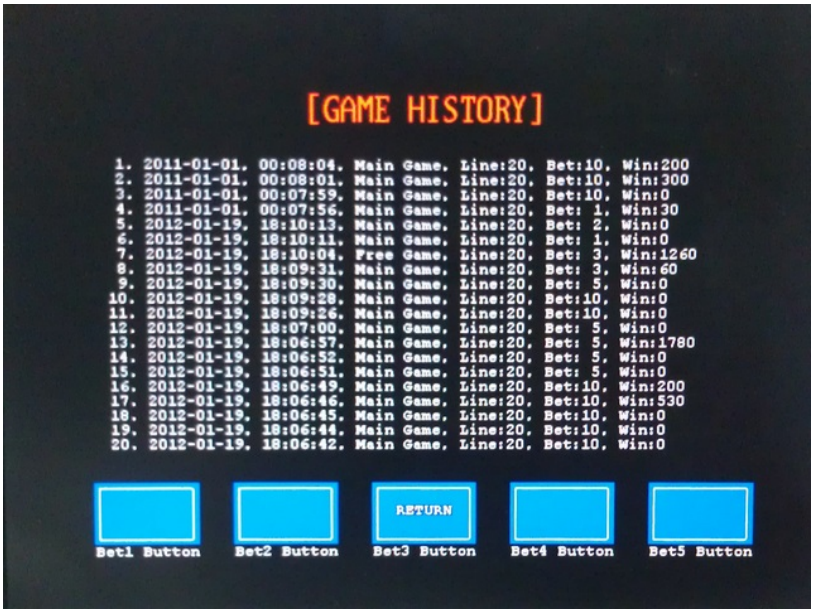

Record of 20 game history (date, time, the main game or free game, LINE, bet, win points)

Press Line 3 to AUDIT MENU

3.PAYOUT HISTORY

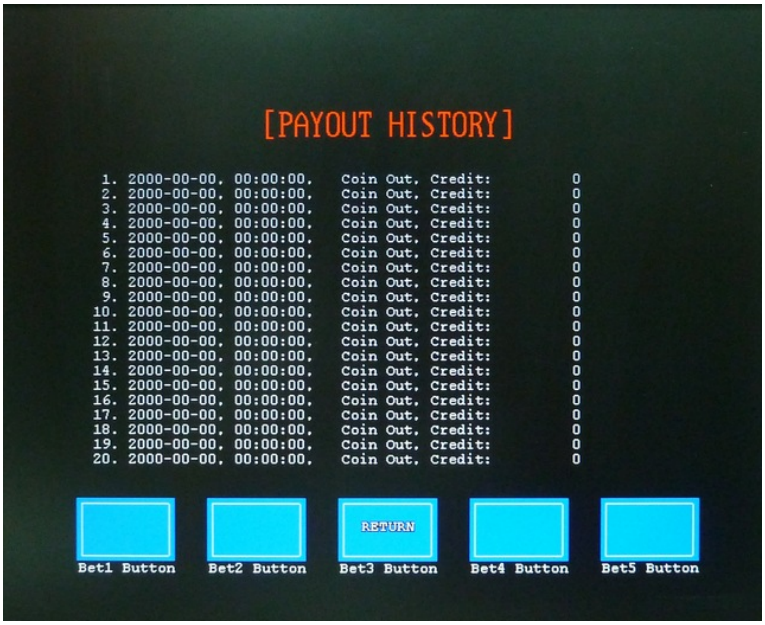

Record of 20 PAYOUT history (date, time, the Ticket out or Coin out or Key out)

Press LINE3 to AUDIT MENU

4.GAME OPTION

INPUT PASSWORD(PRESS LINE1~LINE5 TO INPUT **DEFAULT VALUE(111111)**)

[GAME OPTION]
1. WIN PERCENT : Type 1 : 97.35%
2. MAX BET : 10 BET
3. CREDIT LIMIT : NONE
4. COIN ACCEPTOR : 25 Credits
5. BILL ACCEPTOR : 100 Credits
6. KEY IN RATE : 5000 Credits
7. COUNTER RATE : 100 Credits
8. PAYOUT TYPE : Key Out (Hand Pay)
9. COIN ACCEPTOR INHIBIT TYPE : High Active
10. BILL ACCEPTOR INHIBIT TYPE : High Active
11. DOUBLE UP GAME : Disable
12. SET TO DEFAULT
13. RETURN
PREVIOUS
SELECT
NEXT
Line1 Button
Line2 Button
Line3 Button
Line4 Button
Line5 Button

ITEMS	RANGE LIST	DEFAULT VALUE
1.WIN PERCENT	1:97.35%, 2:94.85%, 3:90.55%, 4:87.33%	97.35%
2.MAX BET	10BET,5BET	10 BET
3.CREDIT LIMIT	NONE, 10000, 20000, 50000, 100000, 200000, 500000, 1000000	NONE
4.COIN ACCEPTOR	NONE, 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 15, 20, 25, 30, 40, 50, 75, 100, 200, 250, 300, 400, 500, 600, 700, 750, 800, 900, 1000, 2000, 2500, 3000, 4000, 5000	25 CREDITS
5.BILL ACCEPTOR	NONE, 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 15, 20, 25, 30, 40, 50, 75, 100, 200, 250, 300, 400, 500, 600, 700, 750, 800, 900, 1000, 2000, 2500, 3000, 4000, 5000	100 CREDITS
6.KEY IN RATE	10, 20, 50, 100, 200, 500, 1000, 2000, 5000, 10000	100 CREDITS
7.COUNTER RATE	1,10,100,1000	100 CREDITS
8.PAYOUT TYPE	Ticket Out(NO Function) ,Key Out (Hand Pay),Coin Out	Key out
9.COIN ACCEPTOR INHIBIT TYPE	High Active,Low Active	High Active
10.BILL ACCEPTOR INHIBIT TYPE	High Active,Low Active	High Active
11.DOUBLE UP GAME	Enable,Disable	
SET TO DEFAULT	TO DEFAULT	
RETURN	TO AUDIT MENU	

5.MACHINE OPTION

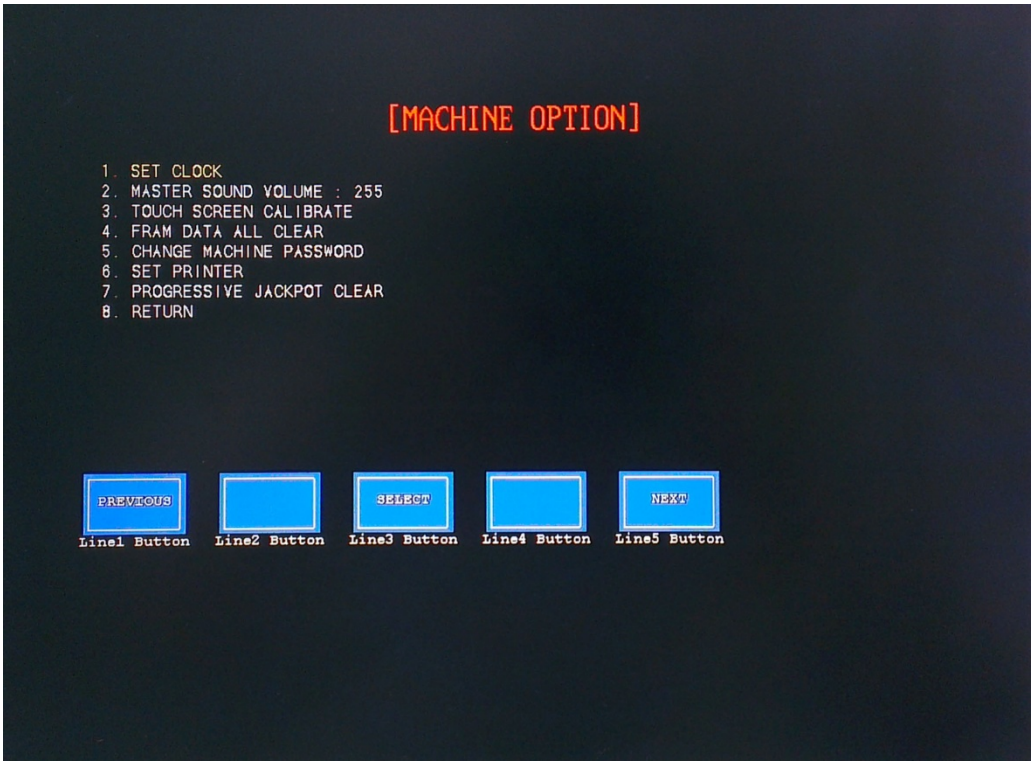

1.SET CLOCK

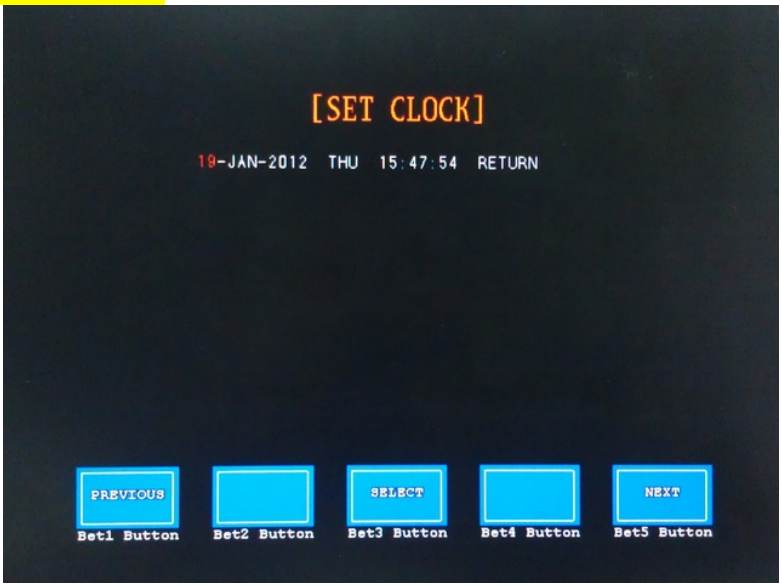

LINE1 PREVIOUS

LINE5 NXIT

LINE3 SELECT

2.MASTER SOUND VOLUME

Adjustment the sound volume
Use LINE3 buttons to control
Select the range 0 to 255

3.TOUCH SCREEN CALIBRATE(NO Function)

4.FRAM DATA ALL CLEAR

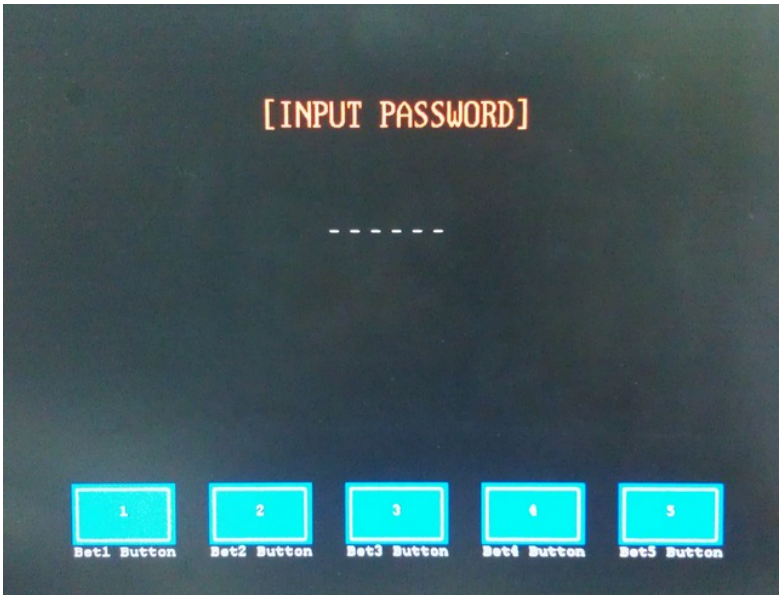

INPUT PASSWORD(PRESS LINE1~LINE5 TO INPUT **DEFAULT VALUE(111111)**)

TO Clear ACCOUNT INFORMATION and

All settings restore the default settings except tim

5.Change FRAM DATA ALL CLEAR password

1. Go to 5.MACHINE OPTION

2. PRESS LINE1 Choose 14.CHANGE MACHINE PASSWORD
3. INPUT OLD PASSWORD(PRESS LINE1~LINE5 TO INPUT DEFAULT VALUE(111111))

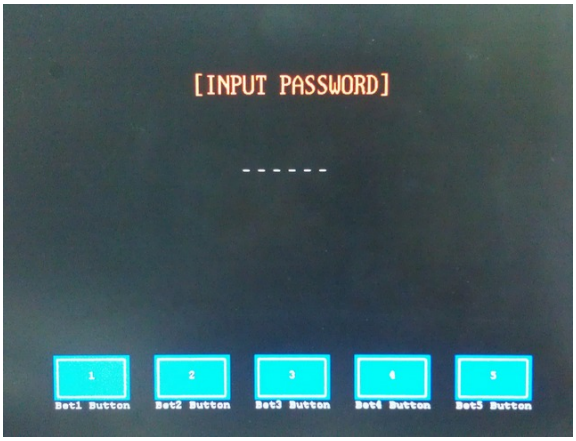

4.INPUT NEW PASSWORD

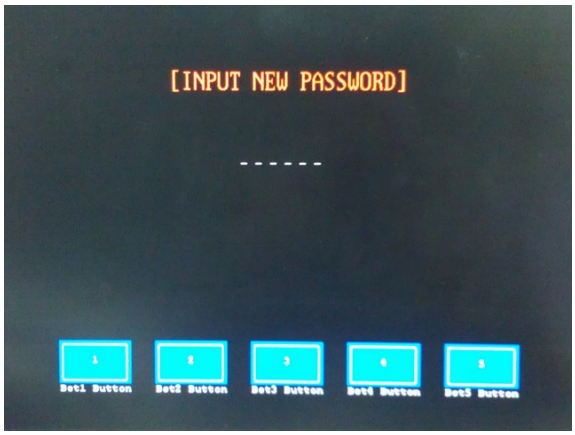

5. Enter the password again to confirm

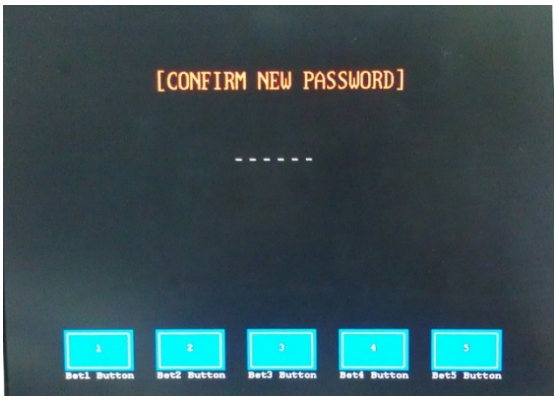

6.SET PRINTER(NO Function)

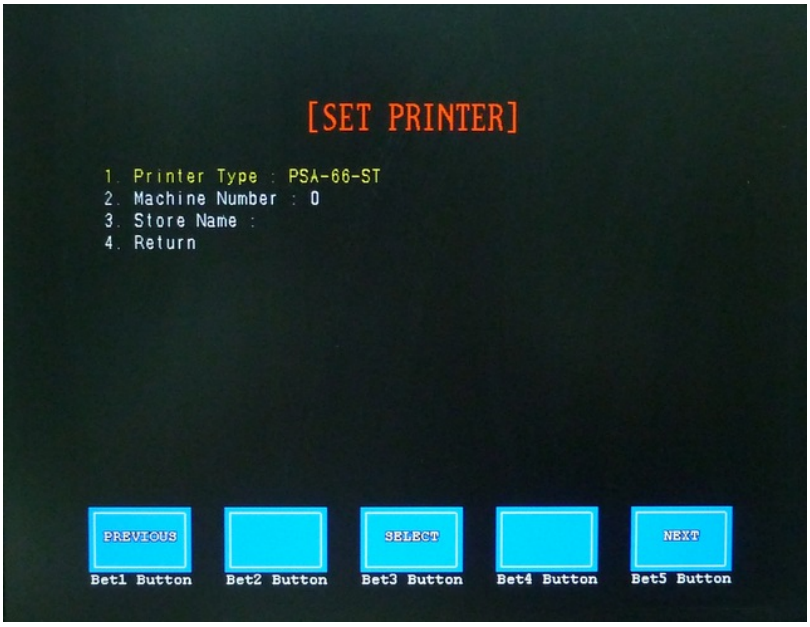

1.Printer Type : Use only the FUTURE LOGIC PSA-66-ST

2.Machine Number: 0~100

3.Store Name:To set store name

[SET STORE NAME]
A B C D E F G H I J K L M N O P Q R S T U V W X Y Z
a b c d e f g h i j k l m n o p q r s t u v w x y z
0 1 2 3 4 5 6 7 8 9 , .
SPACE
BACKSPACE
CANCEL
DONE
<--
SELECT
-->
Bet1 Button
Bet2 Button
Bet3 Button
Bet4 Button
Bet5 Button

14. Return

7.PROGRESSIVE JACKPOT CLEAR

TO CLEAR JACKPOT

6.TEST

1.IO TEST

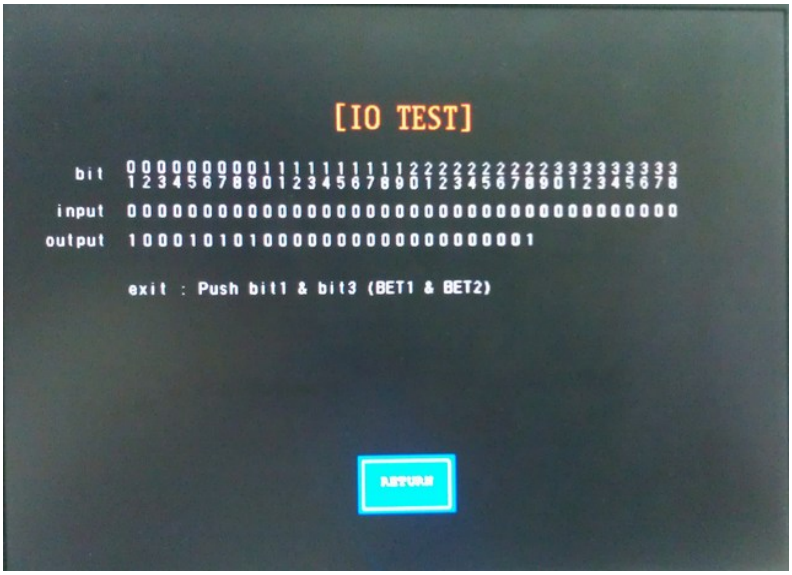

INPUT BIT: 38bit
OUTPUT BIT: 28bit
Press any key to test the buttons ,hold LINE1 and LINE2 buttons for exit the IO test.

2.BITTON & SWITCH & LAMP TEST

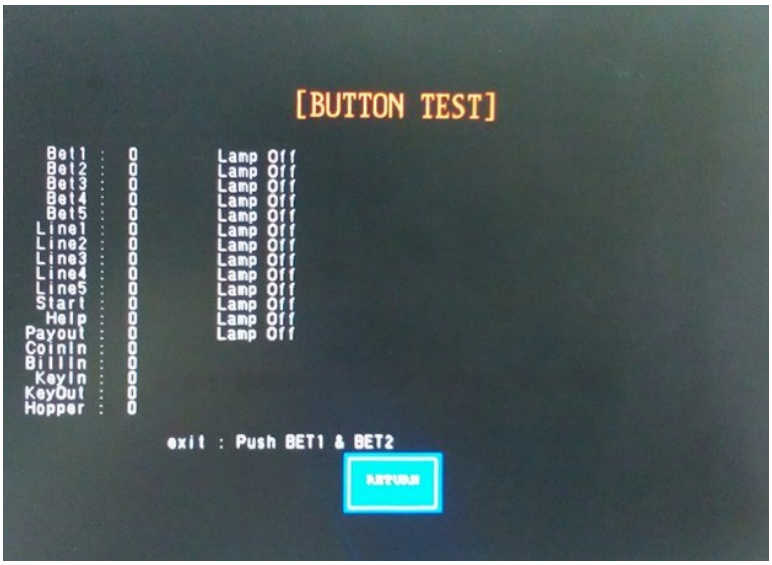

it is to test push-buttons and the lamps in this mode for exit form test "LINE1" and "LINE2" push-buttons should be pushed at the same time

3.HOPPER TEST

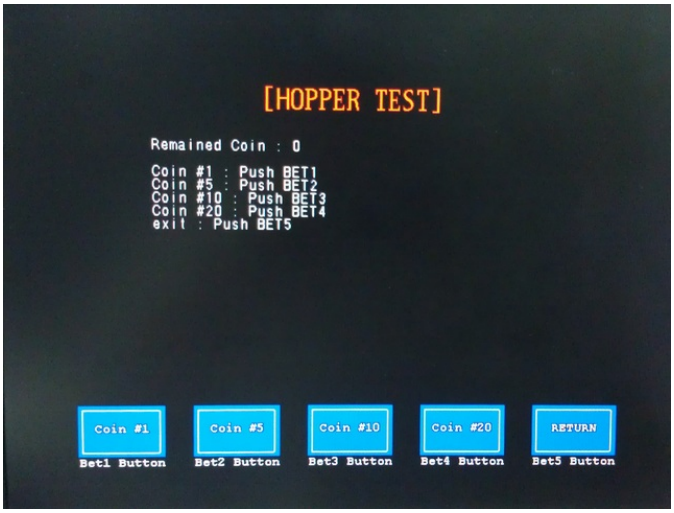

COIN#1 Push LINE1 Return 1 coins
COIN#5 Push LINE2 Return 5 coins
COIN#10 Push LINE3 Return 10 coins
COIN#20 Push LINE4 Return 20 coins
Push LINE5 TO EXIT

4.TOUCH SCREEN TEST(NO Function)

Hardware installation

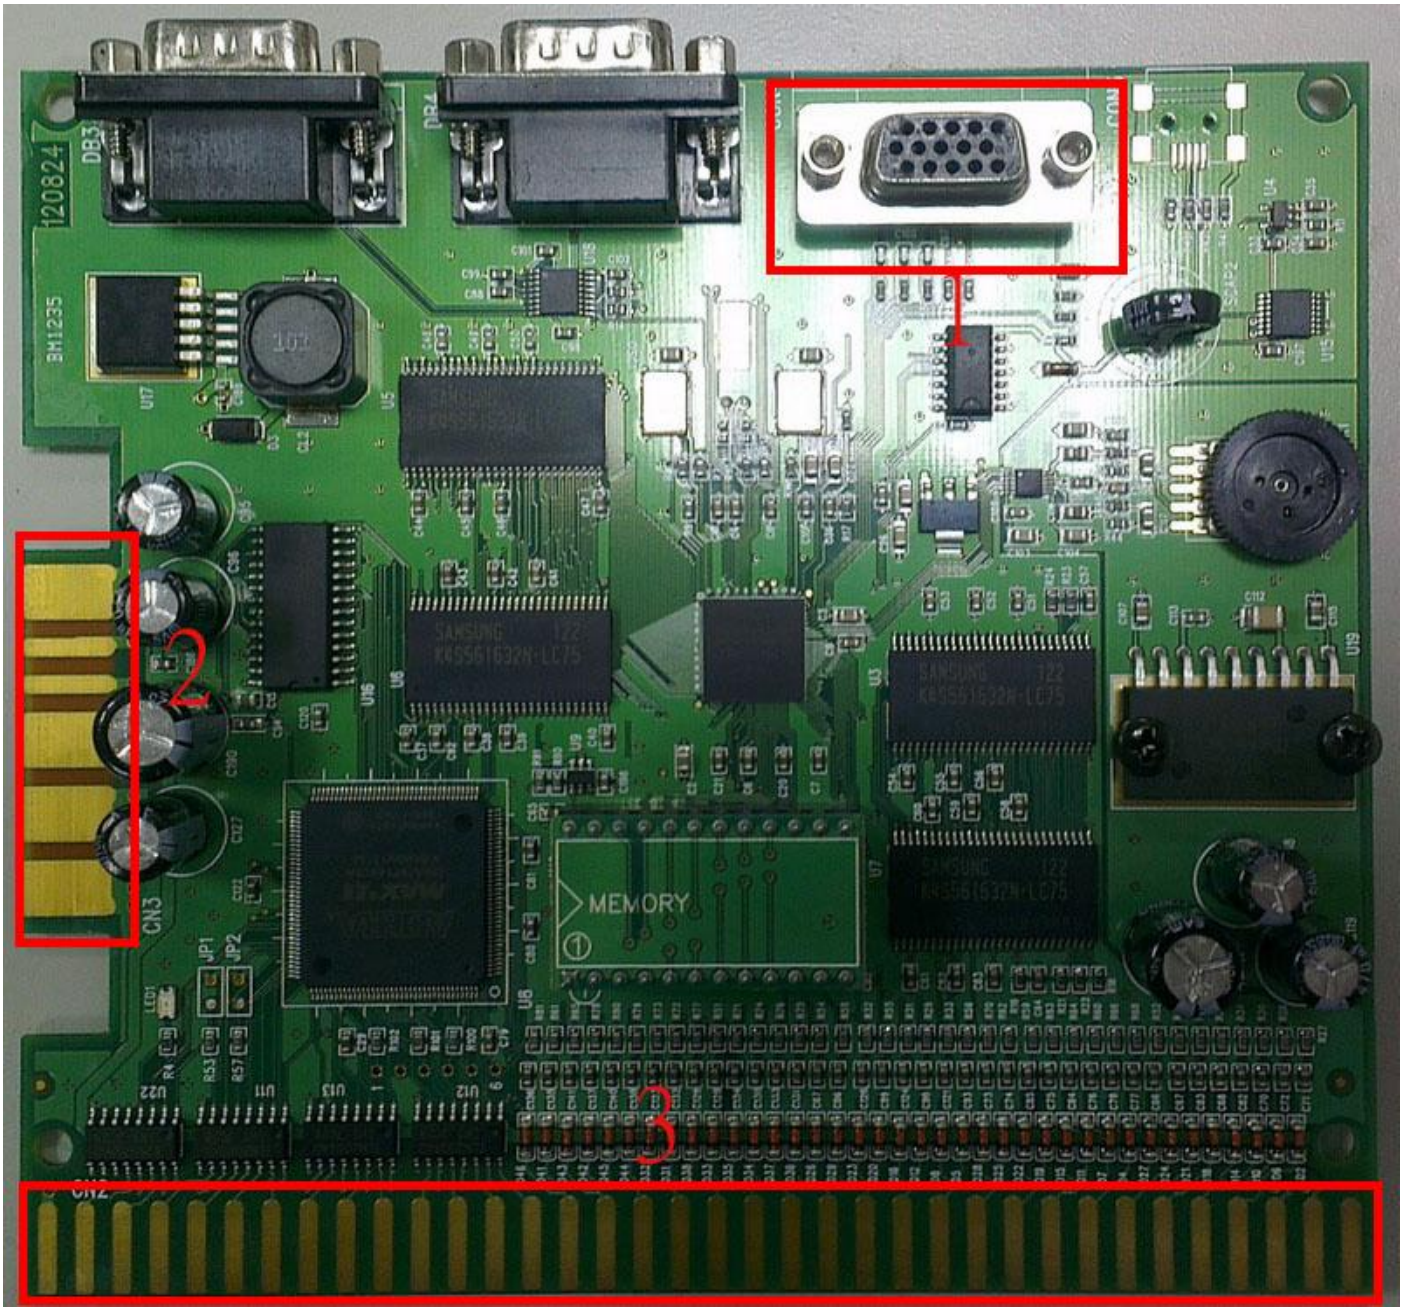

1. Video output connector

2.Please refer to page 17 CONNECTOR DIAGRAM

3.Please refer to page 17 CONNECTOR DIAGRAM

CONNECTOR DIAGRAM

COMPONENT SIDE			SOLDER SIDE		
		1A	1B		
	RIGHT SPEAKER	2A	2B	RIGHT SPEAKER	
	LEFT SPEAKER	3A	3B	LEFT SPEAKER	
IN 0	BET 1 BUTTON	4A	4B	LINE BUTTON 1	IN 1
IN 2	MAX BET BUTTON	5A	5B	LINE BUTTON 2	IN 3
IN 4	DOUBLE BUTTON	6A	6B	LINE BUTTON 3	IN 5
IN 6		7A	7B	LINE BUTTON 4	IN 7
IN 8		8A	8B	LINE BUTTON 5	IN 9
IN 10	START BUTTON	9A	9B		IN 11
IN 12		10A	10B	BILL ACCEPTOR	IN 13
IN 14		11A	11B		IN 15
IN 16		12A	12B		IN 17
IN 18		13A	13B		IN 19
IN 20		14A	14B		IN 21
IN 22	HELP BUTTON	15A	15B		IN 23
IN 24		16A	16B		IN 25
IN 26		17A	17B	CREDIT IN KEYSW	IN 27
IN 28	COIN ACCEPTOR	18A	18B		IN 29
IN 30		19A	19B		IN 31
IN 32		20A	20B		IN 33
IN 34	PAYOUT BUTTON	21A	21B	PAYOUT KEYSW	IN 35
IN 36	ATTENDANT KEYSW	22A	22B	HOPER COIN SW	IN 37
OUT 0		23A	23B	COIN ACCEPTOR INHIBIT	OUT 1
OUT 2		24A	24B	BILL ACCEPTOR INHIBIT	OUT 3
OUT 4	TOTAL IN COUNTER	25A	25B	LINE LAMP 1	OUT 5
OUT 6	TOTAL OUT COUNTER	26A	26B	LINE LAMP 2	OUT 7
OUT 8	TOTAL BET COUNTER	27A	27B	LINE LAMP 3	OUT 9
OUT 10	TOTAL WIN COUNTER	28A	28B	LINE LAMP 4	OUT 11
OUT 12	BET 1 LAMP	29A	29B	LINE LAMP 5	OUT 13
OUT 14	MAX BET LAMP	30A	30B		OUT 15
OUT 16	DOUBLE LAMP	31A	31B	PAYOUT LAMP	OUT 17
OUT 18		32A	32B		OUT 19
OUT 20		33A	33B	HOPER MOTOR	OUT 21
OUT 22	START LAMP	34A	34B	MENU/HELP LAMP	OUT 23
OUT 24		35A	35B		OUT 25
	GND	36A	36B	GND	

COMPONENT SIDE			SOLDER SIDE		
	GND	1A	1B	GND	
	GND	2A	2B	GND	
	+5V	3A	3B	+5V	
	+5V	4A	4B	+5V	
	+12V	5A	5B	+12V	
	+12V	6A	6B	+12V	
		7A	7B		
		8A	8B		
	GND	9A	9B	GND	
	GND	10A	10B	GND	